


GOLDAIR

Operating Instructions

9.0L Mini Oven

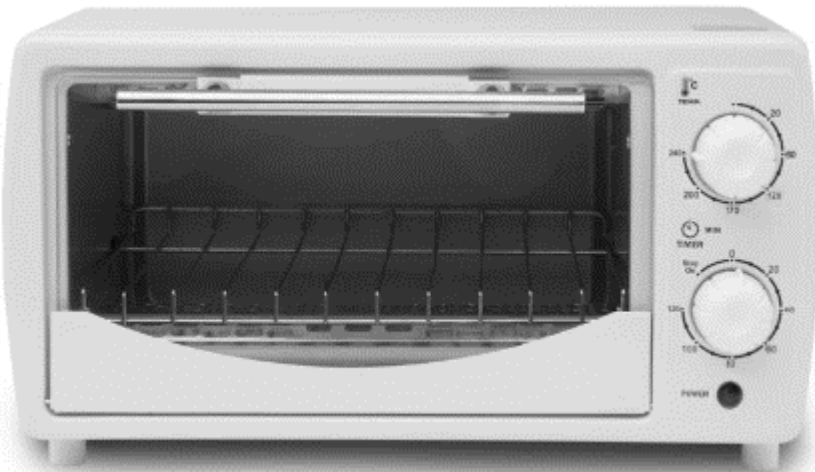

Item No: FMO100

General care and safety guide

Thank you for choosing this GOLDAIR Mini Oven. This GOLDAIR appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.

ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Mini Oven
- ✓ Always operate the Mini Oven on a secure, dry, level surface, keeping the edge clear of the wall.
- ✓ Always use oven mitts when removing items from the Mini Oven
- ✓ Always allow adequate air space – at least 10cm - above and on all sides for air circulation. Do not allow the Mini Oven to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ To disconnect, always turn the timer to OFF, then switch off at the power outlet and remove the plug. Always grasp the plug when removing from the power outlet; do not remove the plug from the power outlet by pulling the cord.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Mini Oven to cool before cleaning and storing, or before adding or removing attachments.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Mini Oven after a malfunction, or if it has been damaged in any manner, to an authorised electrical service technician for examination, repair or adjustment as special purpose tools are required.
- ✓ Children should be supervised to ensure that they do not play with the appliance.

- ✓ Always exercise extreme caution when using containers constructed of anything other than metal or oven-proof Pyrex.
- ✓ Always exercise extreme caution when moving an appliance containing hot oil or any other hot liquid.
- ✓ Always protect yourself from burns by using the tray removal handle and oven mitts.

CAUTION

The temperature of accessible surfaces may be high when the appliance is operating; exercise caution.

Care and safety instructions continued on next page.

TECHNICAL SPECIFICATION

Item No:	FMO100
Power Supply:	220-240VAC, 50Hz
Power:	700W

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand

Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia

Monday – Friday 8am-5pm
Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@cdbgolair.com.au

General care and safety guide, continued

NEVER


- X Never use this appliance outdoors.
- X Never use this appliance for any purpose other than its intended use. This appliance is intended for household use only or in similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- X This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are closely supervised or have been given instruction concerning the use of the Mini Oven by a person responsible for their safety.
- X Close supervision is necessary when the appliance is near children.
- X Never leave the appliance unattended when in use.
- X Never allow the power cord to overhang the edge of a table or bench top or to touch any hot surface as this is a hazard.
- X Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- X To protect against electrical hazards, never immerse the Mini Oven cord set and plug in water or any other liquid.
- X Never place the Mini Oven in a dishwasher.
- X Never use harsh, abrasive or caustic cleaners to clean this appliance.
- X Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Return the appliance to the nearest authorised service centre for examination, repair, or adjustment. Regularly inspect the appliance, supply cord and plug for any damage. If the appliance is damaged in any way, stop use immediately and return to the place of purchase or an authorised service centre.

- X The Mini Oven is not intended to be operated by means of an external timer or separate remote-control system. The use of an extension cord is not recommended.
- X Never place the following materials in the Mini Oven: cardboard, plastic, paper or similar materials.
- X Never store any item in the Mini Oven during operation.
- X Never store any materials, other than the manufacturer's recommended accessories in the Mini Oven when it is not in use.
- X Never clean the Mini Oven with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- X Do not touch hot surfaces; always use the handle or knobs. The temperature of the door or outer surfaces will be higher when the appliance is operating. Never place hands inside the Mini Oven during operation.
- X Never cover the Crumb Tray or any part of the Mini Oven with metal foil. This may cause the Mini Oven to overheat.
- X The use of accessories or attachments not recommended by the appliance manufacturer may cause hazard or injury.
- X Do not leave the oven door open for extended periods of time.
- X Avoid scratching door surfaces or nicking edges. This Mini Oven has a tempered safety glass door. The glass is stronger than ordinary glass and more resistant to breakage however tempered glass can still break and can be weakened by scratches and nicks. Broken pieces will not have sharp edges.



CAUTION: THE MINI OVEN'S SURFACES WILL BECOME HOT DURING AND AFTER USE. ALWAYS WEAR PROTECTIVE, INSULATED OVEN GLOVES WHEN TOUCHING A HOT OVEN, HOT DISHES OR FOOD AND WHILE INSERTING RACKS, PANS OR BAKING TRAYS.

Components

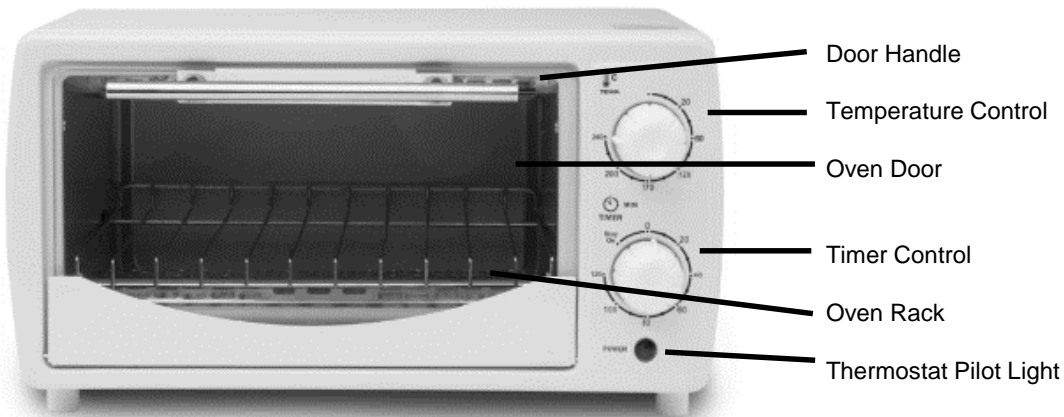

Before first use

1. Read all instructions carefully.
2. Ensure any labels or protective film that may be attached to your Mini Oven are removed.
3. Ensure the Mini Oven is unplugged at the power outlet.
4. Remove the Crumb Tray, Grill Rack and wash in warm soapy water. Dry thoroughly.
5. Fully unwind the power cord.
6. Set the temperature to highest point.
7. Use the timer to let the appliance run (without any food or accessories in it) for about 15 minutes. It may slightly emit smell and smoke. This is normal and only lasts for a short time. Make sure to use the appliance in a well ventilated area
8. Your Mini Oven is now ready to use.

Operating your Mini Oven

Cooking tips

It is advisable to always pre-heat the oven to the desired temperature, to get the best possible cooking results.

Oil the outer surface of food before placing food in the oven to be grilled.

Place the baking tray under the wire rack in order to avoid oil dropping down to the bottom and bottom element.

If the food to be cooked is oily or greasy, you can use two pieces of oil-aluminum foil. Place one piece on the baking tray and use the other piece to cover the food. This avoids oil/grease splashing during cooking.

The **Oven Rack** attaches to the door and moves in and out of the oven automatically when you close/open door.

Temperature Selection

Choose desired temperature.

Timer

Turn Timer dial to the left (counter-clockwise) and the oven will STAY ON until it is manually shut off.

To activate timing function, turn Timer dial to right (clockwise) until it reaches your desired cooking time. A bell will sound at end of programmed time.

Place food to be cooked directly onto Oven Rack or onto Oven Tray then place Oven Tray onto Wire Rack. Close the oven door.

Check progress regularly.

CAUTION: Ensure Timer is at '0' at end of cooking or oven may not be turned off.

Please note that both the Upper element and the Lower element will work once Mini Oven is turned on. This is ideal for general cooking purposes.

Care and cleaning

After use, set timer knob to “0” position. Allow the appliance to cool completely before cleaning.

Turn off at power outlet.

Remove the plug from the power socket. Cool the oven down to the room temperature.

Remove all accessories from inside the oven.

The wire rack and baking tray may be removed from oven and washed by hand in hot, soapy water.

Your oven features a Quick-Clean coating on the interior. If desired, wipe walls with damp cloth moistened with mild detergent. **DO NOT USE STEEL WOOL SCOURING PADS OR ABRASIVE CLEANERS OR SCRAPE INTERIOR WALLS WITH METAL UTENSILS, AS THIS MAY DAMAGE THE Quick-clean INTERIOR.**

Wipe the door with a clean damp cloth, and dry with a paper or cloth towel. Clean exterior with damp cloth.

Warning: ON NO ACCOUNT should water be allowed to get into the oven’s workings.

Warning: Dry all parts and surfaces thoroughly prior to plugging in oven and using.

TO STORE:

Unplug unit. Allow to cool. Store in a clear, dry place, preferably in it’s original box.

Never store while hot or sill plugged in.

Never wrap cord tightly around appliance. Use cord storage area at back of oven.

DO NOT put nay stress on cord where it enters the oven, or it may fray/break, which presents a safety hazard.

After sales service

This appliance is built to a very high standard. There are no user-serviceable parts. Follow these steps if the unit fails to operate:

1. Check instructions have been followed correctly.
2. Check mains supply is functional.
3. If the appliance will not operate, contact the Support and Technical Advice Team before returning it to the retail outlet you purchased it from.

PLEASE NOTE: Light bulbs, if fitted to this model, are not covered under the warranty for this product.

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY. THE WARRANTY DOES NOT COVER COMMERCIAL USE.

GOLDAIR

Two year warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

IMPORTANT: Please complete and retain this warranty card



Name Purchased from

Address Date of purchase

..... Name of product

Suburb Model no

Attach a copy of the purchase receipt to this warranty card